



HEX NUT 3/8"-16
STAINLESS STL

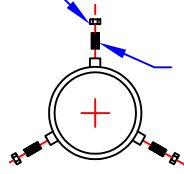

SET SCREW 3/8"-16 x
3/4" STAINLESS STL

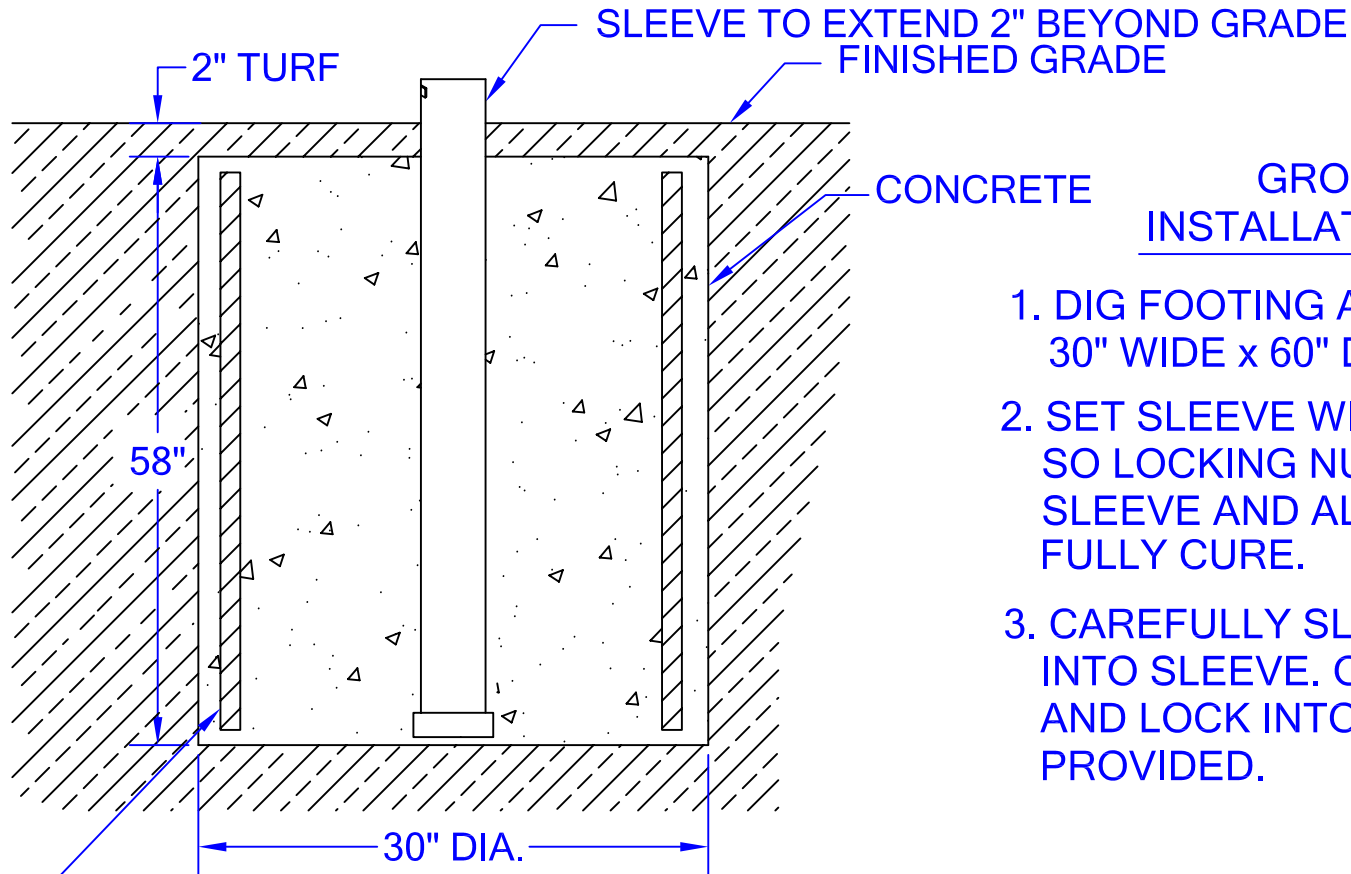

GROUND SLEEVE INSTALLATION INSTRUCTIONS

1. DIG FOOTING AT PROPER LOCATION
30" WIDE x 60" DEEP.
2. SET SLEEVE WITH 2" ABOVE GRADE
SO LOCKING NUTS ARE EXPOSED. PLUMB
SLEEVE AND ALLOW CONCRETE TO
FULLY CURE.
3. CAREFULLY SLIDE FOUL POLE SECTION
INTO SLEEVE. ORIENT FOUL POLE PROPERLY
AND LOCK INTO POSITION USING FASTENERS
PROVIDED.

3/4" RE-BAR x 56", 6 PLACES
PER FOOTING (NOT INCLUDED,
TO BE PROVIDED BY INSTALLER).
THESE ARE TYPICAL FOOTING
DIMENSIONS FOR AVERAGE SOIL
CONDITIONS.